


MBDE-LP

LOCKING PLATES

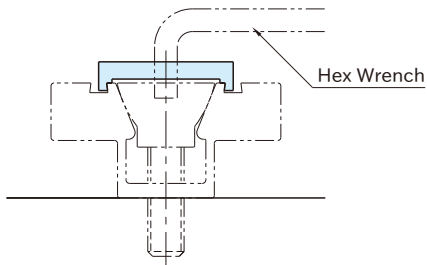

Body
Aluminium

Part Number	Weight (g)
MBDE04-LP	2
MBDE06-LP	7
MBDE08-LP	11
MBDE12-LP	35
MBDE16-LP	85

Notes :

- Locking plates are used only to machine jaws.
- Remove locking plates to clamp workpieces.

How To Use

- Use for machining the jaw of Machinable Double Edge Clamps.
- When machining a jaw, lock the locking plate using a hex wrench.