


How To Use PNEUMATIC FLEX LOCATORS


How to Use

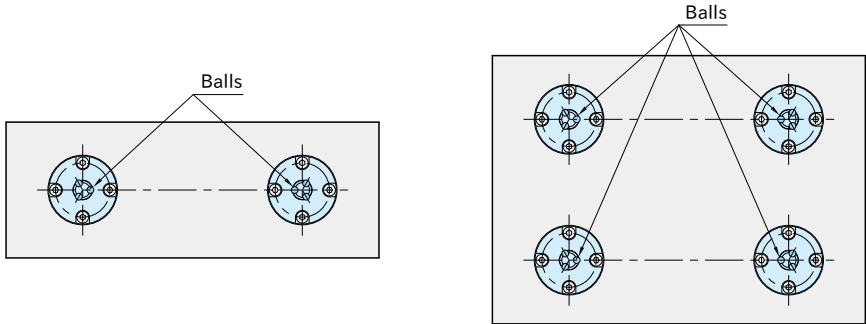

The locators should be mounted in the direction shown in the above figures.


How to Remove (Direct Style Locators)

For easier removal, insert screws into the tapped holes and screw them.

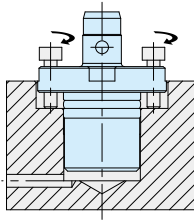

How to Remove (Locating Receivers)

For easier removal, insert screws into the tapped holes and screw them.

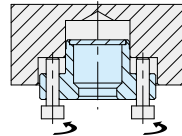

Note

Size	Max. Loading Weight (kg)
AMWF18	40
AMWF26	56

- If the total weight exceeds the maximum loading weight, the locating repeatability may exceed $\pm 10 \mu\text{m}$.
- In vertical use, the locating repeatability may exceed $\pm 10 \mu\text{m}$.
- Pneumatic Clamping Locators and Locating Receivers should be positioned equally against the center of the fixture plate.
- For Port Style Locators, use with air joint that is available commercially.

Note: The maximum loading weight is the entire sum of the weight of fixture plates, fixtures and workpieces.

Note: The maximum loading weight shown is the value when two sets each of **AMWF-L-S** Pneumatic Clamping Locators and **AMWF-BU** Locating Receivers are used.