



TKN,TKS


KNURLED THUMB KNOBS

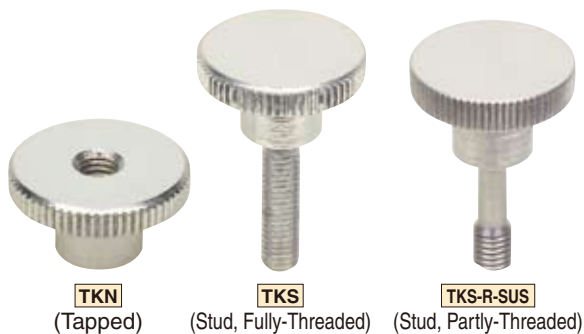


Type	Body
TKN	Steel(SS400) Chrome plated finish
TKS	Steel (S45C) Chrome plated finish
TKN-SUS	Stainless steel (SUS303)
TKS-SUS	
TKS-R-SUS	

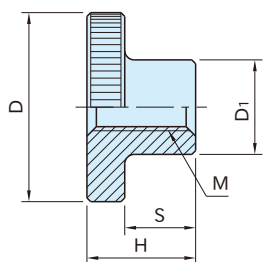

TKN TKN-SUS
(Tapped)

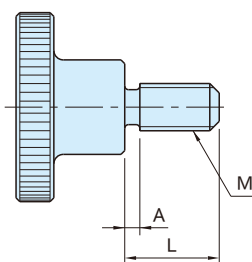

TKS TKS-SUS
(Stud, Fully-Threaded)

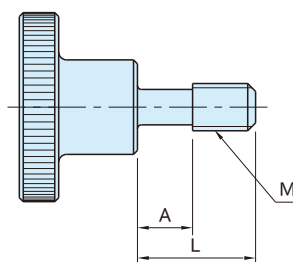

TKS-R-SUS
(Stud, Partly-Threaded)

TKN TKN-SUS (Tapped)

Steel Part Number	Stainless Steel Part Number	D	H	D ₁	S	M	Weight (g)
TKN 3	TKN 3-SUS	12	7.5	6	5	M 3×0.5	6
TKN 4	TKN 4-SUS	16	9.5	8	6	M 4×0.7	7
TKN 5	TKN 5-SUS	20	11.5	10	7.5	M 5×0.8	15
TKN 6	TKN 6-SUS	24	15	12	10	M 6×1	25
TKN 8	TKN 8-SUS	30	18	16	12	M 8×1.25	45
TKN10	TKN10-SUS	36	23	20	15	M10×1.5	90

TKS TKS-SUS (Stud, Fully-Threaded)


Steel	Stainless Steel	D	H	D ₁	S	M	L	A	Weight (g)
Part Number	Part Number								
TKS 3×10	TKS 3×10-SUS	12	7.5	6	5	M 3×0.5	10	2	7
TKS 4×10	TKS 4×10-SUS	16	9.5	8	6	M 4×0.7		2.2	9
TKS 4×15	TKS 4×15-SUS						15	10	
TKS 5×10	TKS 5×10-SUS	20	11.5	10	7.5	M 5×0.8	10	1.6	15
TKS 5×15	TKS 5×15-SUS						15		18
TKS 5×20	TKS 5×20-SUS						20		20
TKS 6×15	TKS 6×15-SUS	24	15	12	10	M 6×1	15	2	25
TKS 6×20	TKS 6×20-SUS						20		27
TKS 6×25	TKS 6×25-SUS						25		29
TKS 6×30	TKS 6×30-SUS						30		30
TKS 8×20	TKS 8×20-SUS	30	18	16	12	M 8×1.25	20	2.5	60
TKS 8×25	TKS 8×25-SUS						25		63
TKS 8×30	TKS 8×30-SUS						30		65
TKS 10×25	TKS 10×25-SUS	36	23	20	15	M10×1.5	25	3	115
TKS 10×30	TKS 10×30-SUS						30		119
TKS 10×40	TKS 10×40-SUS						40		125

TKS-R-SUS (Stud, Partly-Threaded (Stainless Steel))

Part Number	D	H	D ₁	S	M	L	A	Weight (g)
TKS3×10R 6-SUS	12	7.5	6	5	M3×0.5	10	6	3.6
TKS4×10R 5-SUS	16	9.5	8	6	M4×0.7		5	8.5
TKS4×15R10-SUS						15	10	8.8
TKS5×10R 4-SUS	20	11.5	10	7.5	M5×0.8	10	4	15.2
TKS5×20R14-SUS						20	14	16.0
TKS6×15R 7-SUS	24	15	12	10	M6×1	15	7	28.7
TKS6×20R12-SUS						20	12	29.3
TKS6×30R22-SUS						30	22	29.8
TKS8×20R10-SUS	30	18	16	12	M8×1.25	20	10	56.2
TKS8×30R20-SUS						30	20	58.4

Features:

Perfect for use in fixing a panel board.

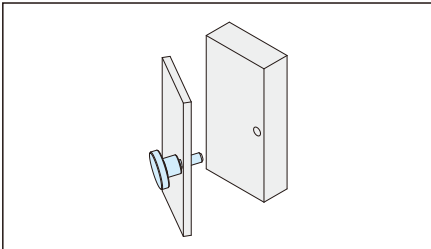

How To Use

The **TKS-R-SUS** type has a partly-threaded stud that helps to prevent the knob from dropping off a panel board when it is removed.

